



BBM Software manual—Universal version

Figure 1 :
Chassis Reserved Body Build electrical interface diagram

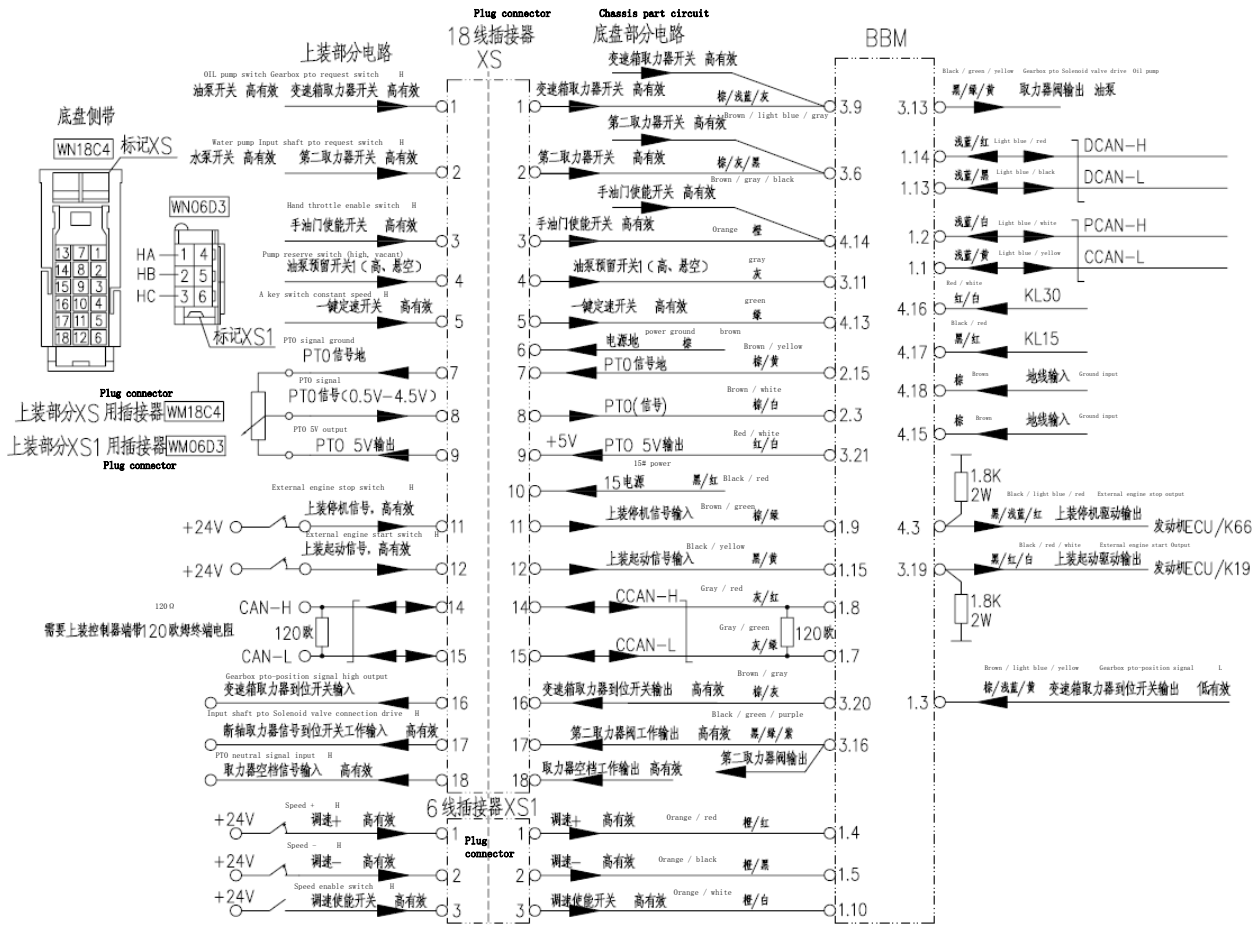

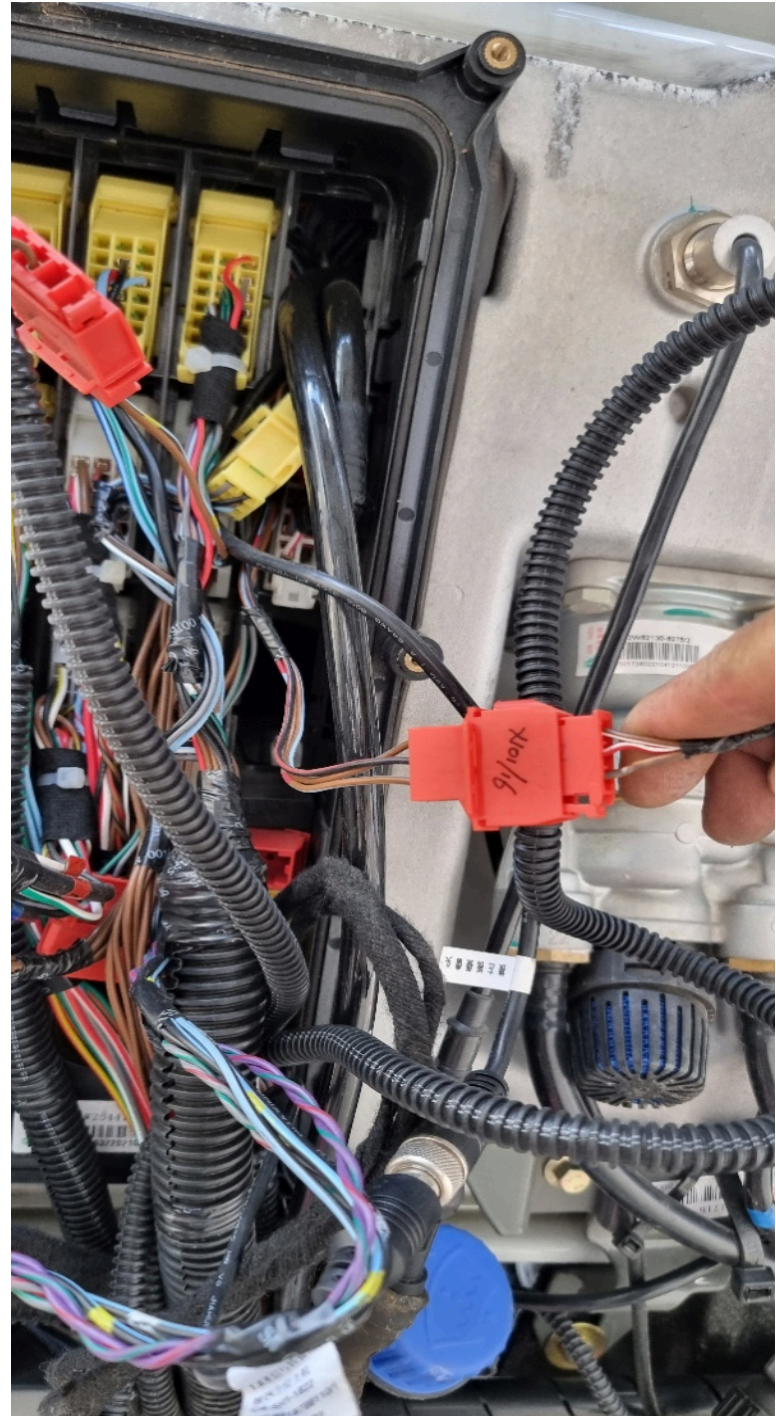

Remote Throttle connections

Signal	X101/16.1	AF01	LK	0.75	675	┌ ├ └
(+5V)	X101/16.2	AF01	BA	0.75	671	
(GND1)	X101/16.3	AF01	LKA	0.75	672	



Remote throttle in battery
box which goes to front
of truck under bonnet to
above connectors