



Installation manual

Kenworth A320



Dip-Switch Settings

Make sure that all the dipswitches are set to **OFF**
with the exception of **NO. 10** for the Fan



Kenworth FMS Plug Truck Side


Pin 4 - Ground

Pin 6 - Can Hi (yellow)

Pin 9 - Can Low (green)

Pin 10 - Ignition (5A Fuse A10 in fuse box)

} 60 Ohms

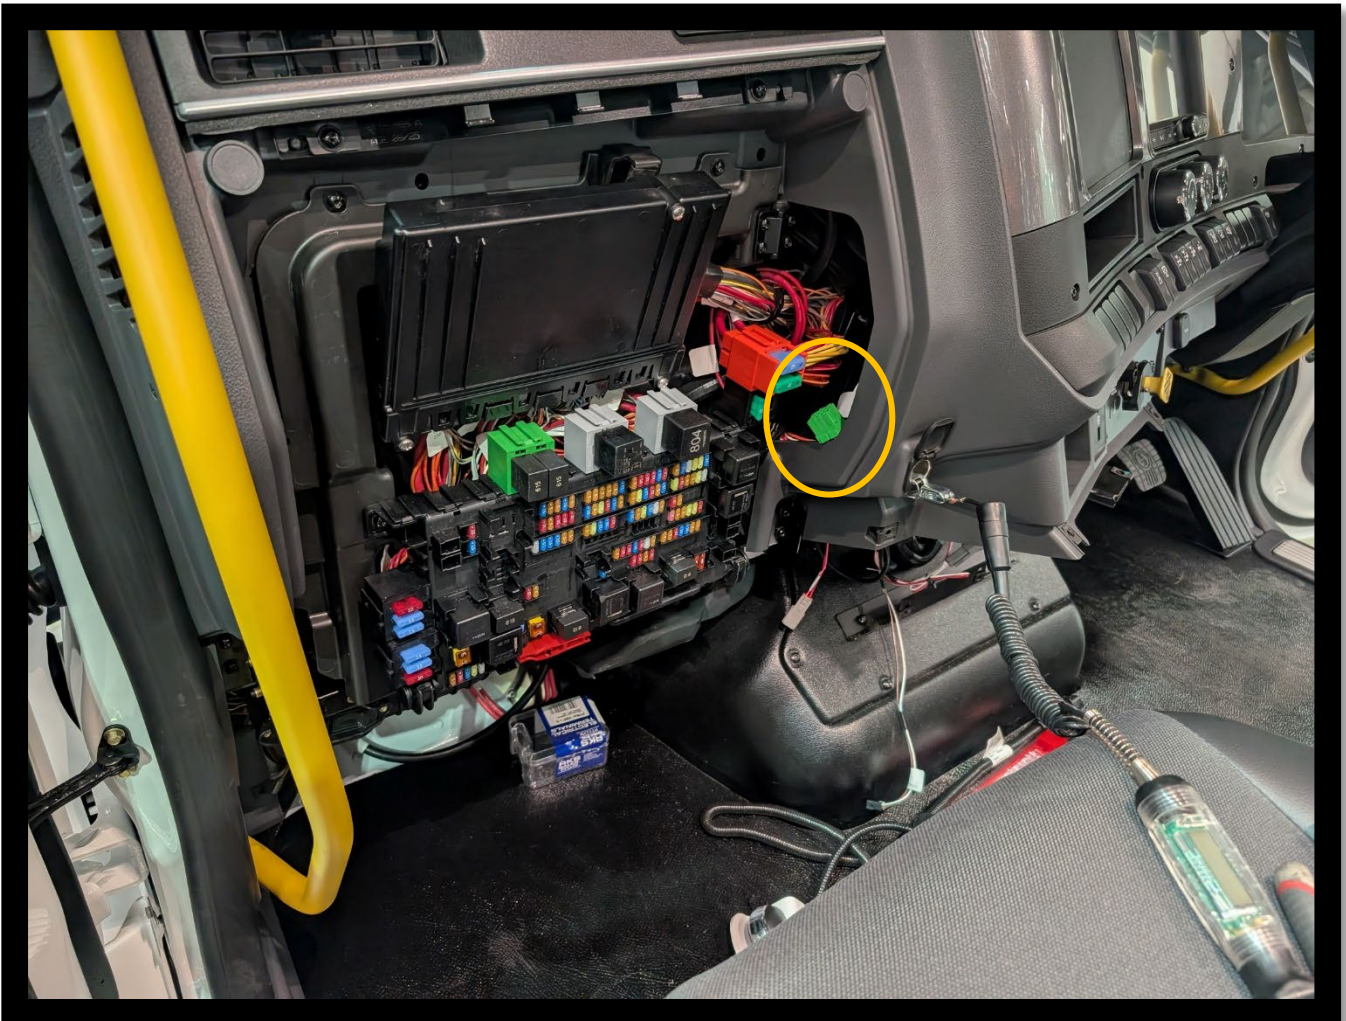

Horn Wire – Dark Grey # E5971-1

1. Location: behind the coin slot, centered in the dash.
2. Remove the radio trim to access and remove the coin slot above the switches.
3. Reach behind the coin slot and locate the wiring harness. Remove any tape wraps and cut cable ties as needed to separate the wires.
4. Identify the horn wire (dark grey, number E5971-1).
5. Solder the Agi-Drive brown wire to the horn wire and insulate the joint with electrical tape.
6. Reassemble trim and secure any loose wiring.

Safety note: isolate the vehicle battery before beginning work to avoid short circuits or accidental airbag/horn deployment. If unsure, consult a professional.

Horn Wire # E5971-1 Pictures:

